


Compatible data source: Fronius API


If you receive the following warning message while configuring the Fronius data source in the Autarkus Energy Manager, please enable the Fronius API as described below.

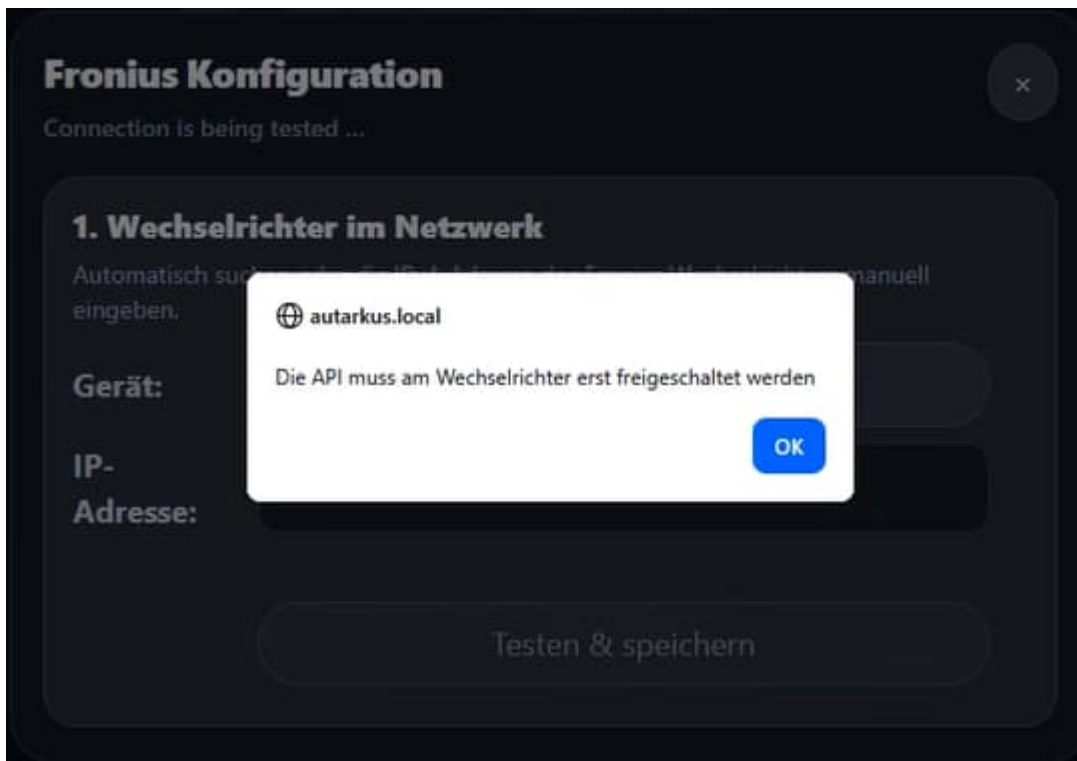

1. Open your Fronius inverter in your web browser


Enter the IP address of your Fronius inverter into your web browser.

You should now see a Fronius web interface similar to the one shown below. Click the Login button.

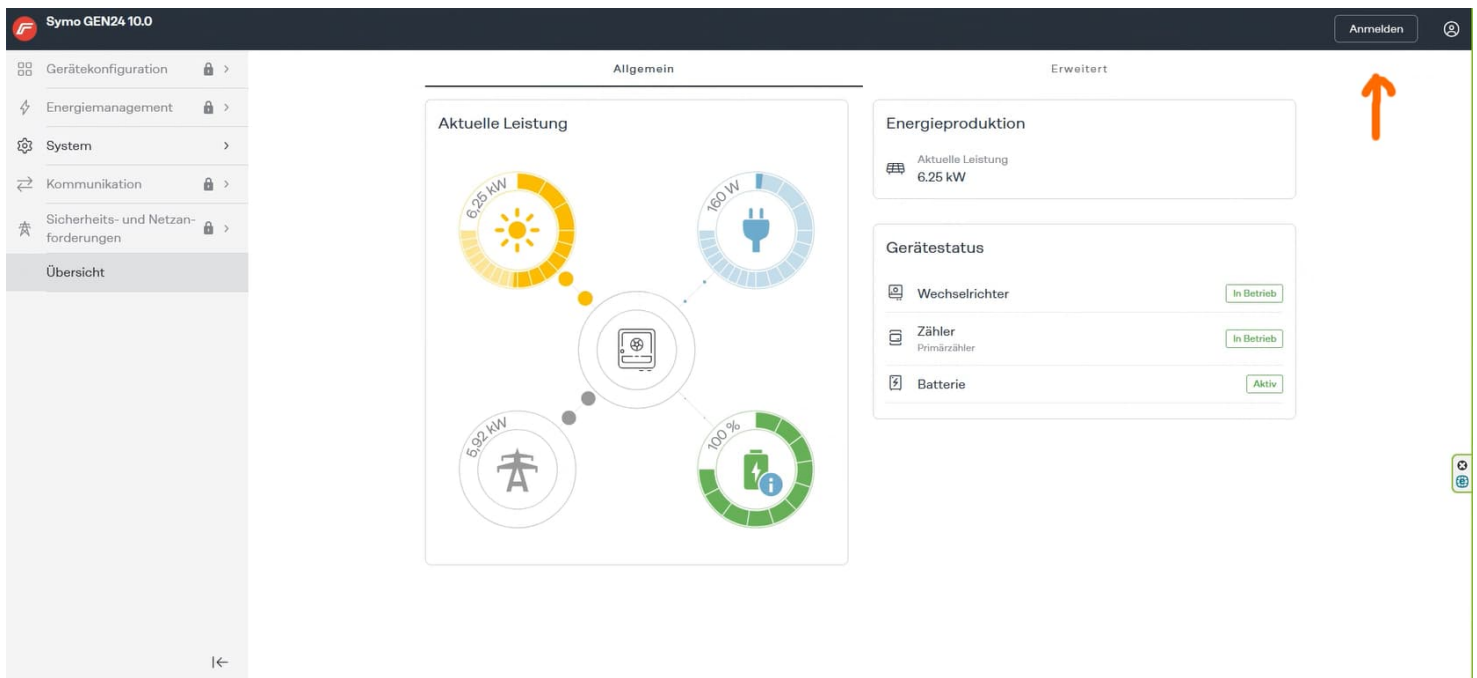


2. Enter your customer password

You do not need an installer login for this step. Your Solar.web customer password is sufficient.

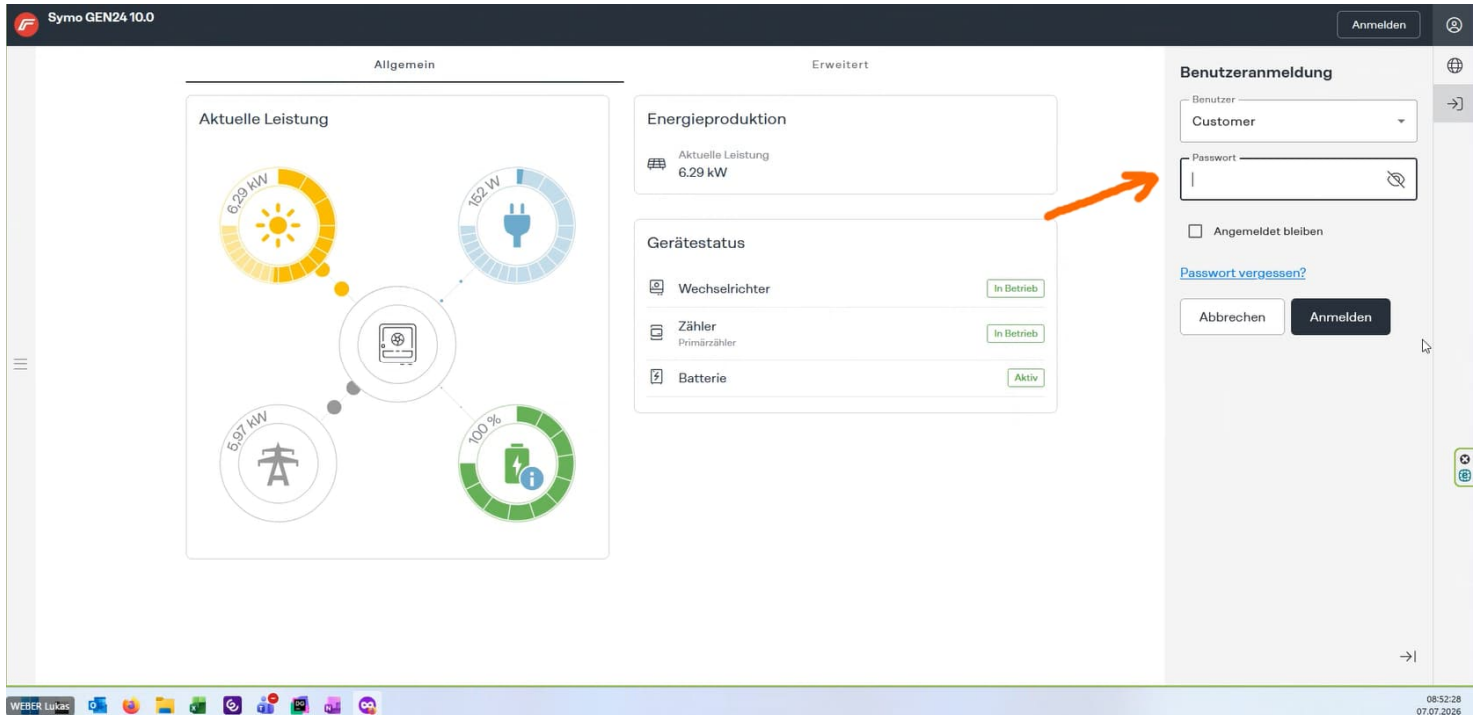


3. Open the Communication menu

Navigate to the Communication menu.

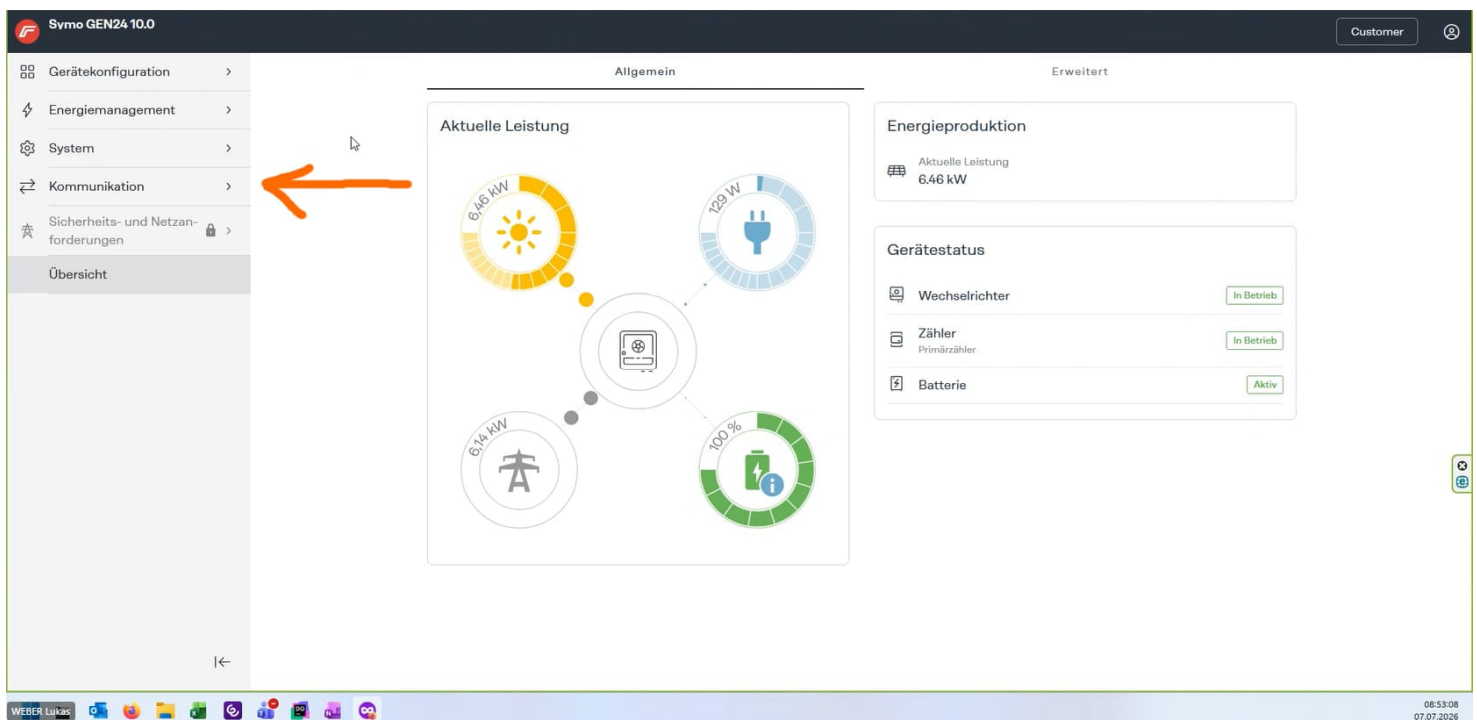

4. Open the Solar API menu


Navigate to the Solar API menu.

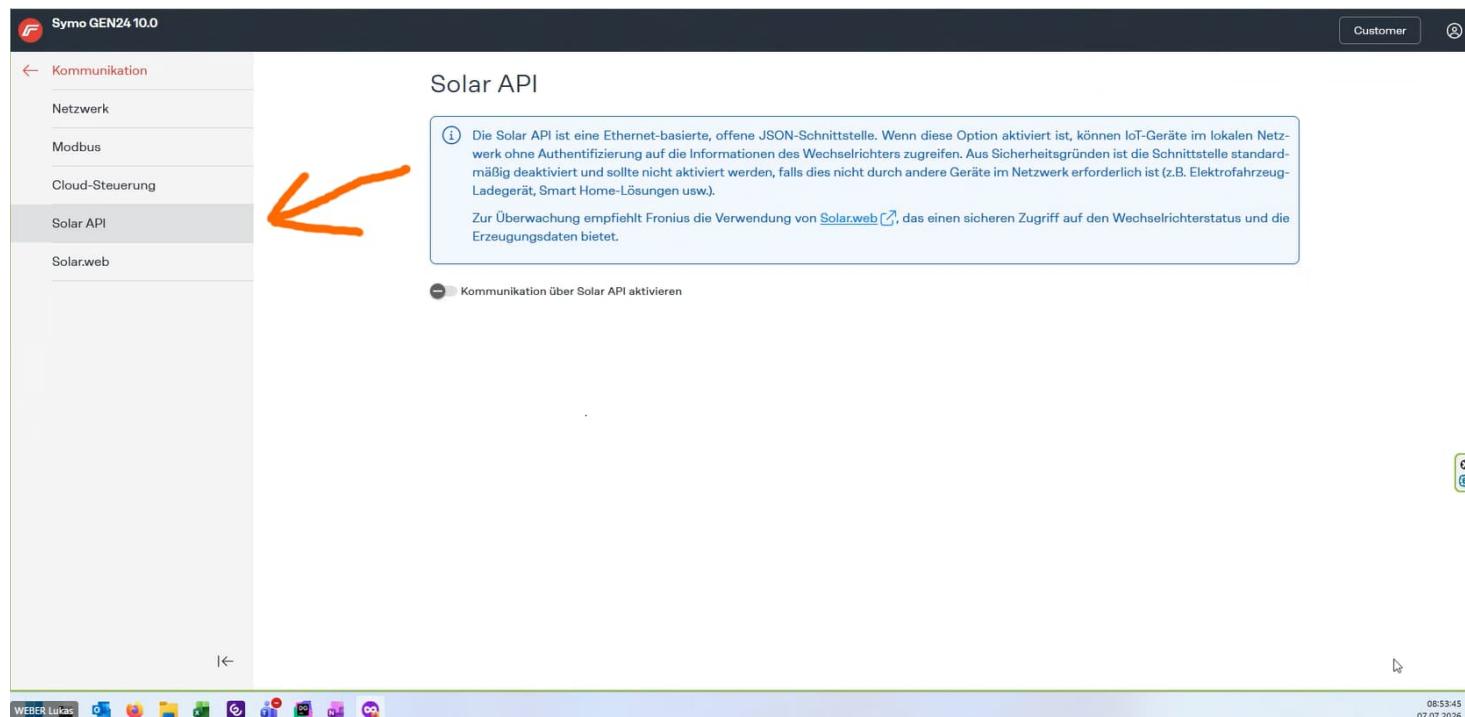

5. Enable the API and save the settings

Enable the Solar API using the toggle switch.

Then click the Save button.

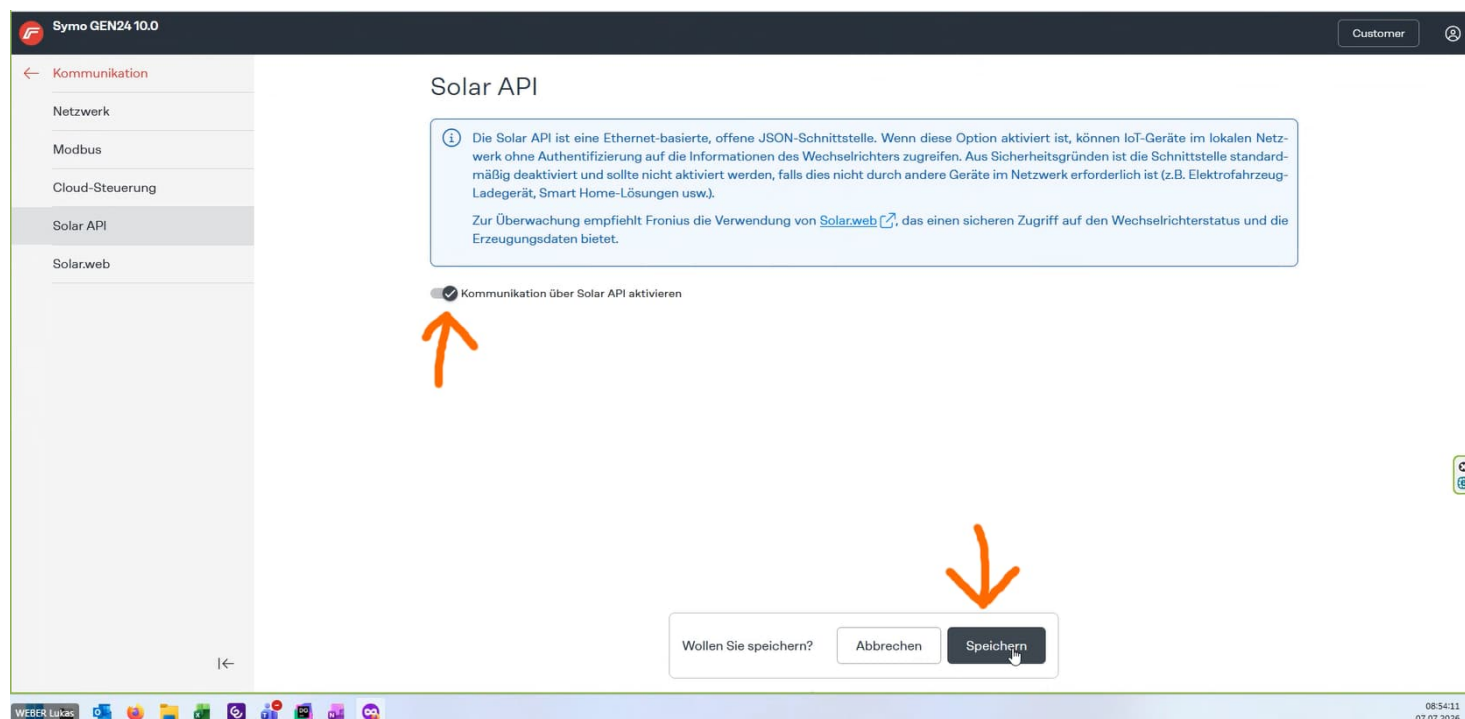

6. Return to the Autarkus Energy Manager

Return to the Autarkus Energy Manager and complete the configuration of the Fronius data source.